ECOFMIX500 - ECOFMIX501

Description - General information

MCS/SCP control panel with pneumatic evacuation for single use PSC Smoke exhaust control box and air ventilation unit with metal casing in red. Device consisting of 1 pin hammer for opening and 1 pin hammer for closing.

Automatic drainage system.

Clip-on casing for easy installation


On the front, a plastic ejection flap gives access to the pin hammer. (depending on the model) Clip-on mounting (no tools needed) of an electric or pneumatic DCM.

Locked with a safety key.

Space for spare cartridges.

Delivered with plastic seal.



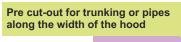



Ventilation unit Open / close Lever control, electro-valve optional



door without ejection flap










- Manufacturer 's number

- Article code Lot number
- DCM output pressure (in use)
- Characteristics of ventilation unit

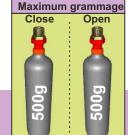

MOD48R (M4)	48Vcc - 1.8W - Break mode
Pneumatic DCM	
Ref.	Туре
MODP (M5)	Pressure: 6 to 20 bar

Casing lock


Electric DCMs

MOD24R (M2) 24Vcc - 1.8W - Break mode

MOD24E (M1) 24Vcc - 3.5W - Transmission mode

MOD48E (M3) 48Vcc - 3.5W - Transmission mode

Type

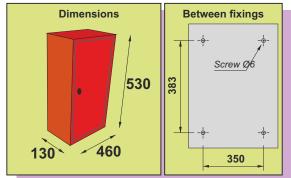



Ref.

Cartridges must be screwed in place manually.

NF - Control devices for F.S.S.

This mark certifies :
- conformity to the norm NF S 61-938 for S.C.P.s
- the values of the characteristics given in this technical file.

DUPUY EQUIPEMENTS

Les Ajeux - 72400 La Ferté Bernard - France Tél.: +33 (0)2 43 60 78 60 - Fax: +33 (0)2 43 93 41 94

e-mail: clients@de72.fr





Open Close CO² + ventilation O/C

ECOFMIX500 - ECOFMIX501

REMINDER:

Height of installation: § 9.1 of the NFS 61-932

The safety device to be used should be fitted at a height of between 0.90m and 1.30m from the ground.

Pipes and connections: § 7.2 of the NFS61-932

Pipes should be made entirely of copper or stainless steel. Connections should be airtight, metal against metal.

Pneumatic piping should run through the interior of the building, to avoid the risk of

Performance and testing: § 6.4 of the NFS61-932

The calculation to define the capacity required should be based on the characteristics of the components of the system to be fed and should take into account the characteristics of the circuit.

The pressure should be checked using a specialised tool (for example a pressure gauge) in order to make sure that the pressure present in the circuit corresponds to this calculation. In addition, this tool will check the airtightness of the circuit.

Installation

Lift off the casing.

Check that the wall or hanging surface is completely flat, in order to ensure that the box is fitted correctly.

Fix the back of the box to the wall or hanging surface.

Connect the box to the copper circuit.

Put the pipe into the joint, tighten manually and then with a spanner, until it is secure. (1.5 turns maximum)

Testing

Lift up the pin hammer levers.

Screw the CO² cartridge in place MANUALLY.

Carry out the manual or distance controlled triggering action (if DCM is installed) for opening.

Carry out the closing procedure.

Proceed to the resetting of the box. (See below)

Resetting

DCM

Make sure that the DCM command is switched off:

If modules M1 to M4 are in place:

Electric DCM line:

Power on in Break mode

Power off in Transmission mode

if module M5 is in place:

pneumatic DCM line pressure off.

Reset the DCM by raising the front cover up and pushing it back into plac

TO OPEN

Press on the ball (1) and raise the lever (2) up to the top. (See opposite)

TO CLOSE

Press on the ball (1) and raise the lever (2) up to the top. (See below)



MODU

Note: The resetting of the CLOSE pin hammer automatically places the circuit selector back into standby position.

Insert new cartridges into the box. (for use and spares).

Put the ejection cover back in place.(depending on the model)

Close the door and secure with a new seal.



Installation (continued)

Connecting the compressed air system

Connect the compressed air system to the filter joint.

Ventilation unit DCMs

See corresponding technical files.

Putting the air ventilation into service

Carry out open/close operating cycles by moving the ventilation unit lever up or down.

To close ventilation mode after use, unscrew the cartridge(s) in order to drain the system.

Push the stud situated on the right of the ventilation unit back towards the left.

Push down the ventilation unit lever.

Use the pre cut-out on the cover to pass through the pipe(s). Attach the casing to the back and turn the clips outwards to lock

Insert the cartridges for use into the box. Screw the plastic nut onto the heads of the spare cartridges and place them on their brackets. Close the door. Fix the seal in place.

Connection of DCMs

See corresponding technical files.

SMOKE EXHAUST Use

In the case of a fire, push open the ejection flap and pull down the pin hammer lever.

To close, open the door with the safety key, then push down the (Lever marked CLOSE in blue) close lever

Maintenance

THE PRODUCT, every 6 months.

Check that everything is in good working order.

Check the condition of the pins.

INSTALLATION, see according to norm NFS61-933

Easy installation, useful material

To carry out the installation of this product, you will need the following Pressure control kit KIP01 TCB506 Copper piping TCC2506 Copper reel Straight joint RAU2621 T joint RAU2623 Elbow joint RAU2622 Steel piping TAT2508 Metal trunking GM201

CO² Cartridge CARDE50..... DCM MOD... Pressure indicator box BIP02

Technical Characteristics

Material : Steel, brass, aluminium. :Zinc coating: RAL3000 Safety measures : To be handled with the fingers.

Force to be applied :<5daN. Protection index : IP42. Energy.: Co² or inert gas.

DCM exit: Olive screw con :Olive screw connection Temperature during use . . :+ 5°C to + 50°C Pressure : operating = 3 to 20 bar

in use = 60 bar during testing = 90 bar.

CO² cartridge pitch :15 x 125

DCM connection : - electric (cf. : fileNF012)
Running factor : 100 % at a temperature of 20°C ± 5°C Voltage (Un): 24 or 48 volts continuous current T.B.T.S.

Consumption at nominal voltage (Un):3,5 W (24 or 48 volt c.c. transmission) 1,8 W (24 or 48 volt c.c. break)

- pneumatic (cf.: file NF013)

Consumption: 0,01 normo-litre.

Pressure of DCM: Minimum = 6 bar -Maximum = 20 bar.

Ventilation operating device:

- Ventilation unit type 3, open and close

 $\label{lem:ventilation} \textit{Ventilation energy} \dots \dots : \textit{Compressed air filtered at 40 } \mu \ (\textit{dry air without oil}). \\ \textit{Ventilation pressure} : \textit{Compressed air from 3 to 10 bar.}$

DUPUY EQUIPEMENTS Les Ajeux - 72400 La Ferté Bernard - France www.dupuy-equipements.com